



180, 3rd Avenue, L'Islet, Quebec, G0R 2C0, CANADA
Tel.: 1 800 463-7043 Fax: 1 800 662-7801 www.ouellet.com

INSTRUCTIONS “OCT” Series



WARNING



When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electrical shock and injury, including the following.

Read carefully these instructions before installation, operation of the heater. Failure to adhere to the instructions could result in fire, electric shock, serious personal injury, and death or property damage. Review frequently for continuing safe operation and instruction of future users, if necessary.

IMPORTANT INSTRUCTIONS

- 1- Read all instructions before installing or using this heater.
- 2- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, like furniture, pillows, bedding, papers, clothes, and curtains at least 36 in. (915 mm) from the front of the heater and away from the sides.
- 3- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- 4- Do not operate any heater after it malfunctions. Disconnect power at service panel and have heater inspected by a reputable electrician before reusing.
- 5- Do not use outdoors.
- 6- To disconnect heater, turn off power to heater circuit at main disconnect panel.
- 7- Do not insert or allow foreign objects to enter any exhaust opening as this may cause an electric shock or fire, or damage the heater.
- 8- Do not block air intakes or exhaust in any way whatsoever.
- 9- This heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 10- L'appareil a été conçu et certifié pour du chauffage ambiant seulement. La température ambiante maximale de fonctionnement est de 30 °C (86 °F).
- 11- L'appareil n'est pas conçu pour être utilisé dans un environnement humide où il pourrait y avoir formation de condensation sur l'appareil.
- 12- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
- 13- **AMERICAN VERSION ONLY:** This heater includes a visual alarm to warn that parts of the heater are getting excessively hot. If the light turns on, immediately turn the heater off and inspect for any objects on or adjacent to the heater that may have blocked the airflow or otherwise caused high temperatures to have occurred. If no obstruction is visible, the heater must be checked by a qualified person. **DO NOT OPERATE THE HEATER WHEN THE ALARM LIGHT IS ON.**
- 14- The thermostat should not be considered an infallible device in cases where maintaining a temperature is considered critical. Examples: Hazardous material storage, computer server room, etc. In these particular cases, it is imperative to add a monitoring system to avoid the consequences of a thermostat failure.

SAVE THESE INSTRUCTIONS

INSTALLATION INSTRUCTIONS

The installation of this heater must be executed by a qualified person, where required by law.

CAUTION:

- Use supply wires suitable for 90 °C (194 °F).
- For bathroom use, the heater must be installed so that switches and other controls cannot be touched by anyone in the bath or shower.
- This product is not recommended with the ground fault circuit interrupter (GFCI). The humidity in the air can generate a leakage current higher than the limit of the GFCI which will cause the product to stop.

SURFACE WALL MOUNTING:

- 1- Locate approximately the appropriate place to pull the electrical wiring from the wall. The wire shall be at the right of the wall bracket. Recommended clearance below heater base to floor is 4 in. (102 mm) minimum.
- 2- The 2 arrows on the support mark the center of the heater. Before installing support, align center of heater with support center mark and make sure the heater sides are at least 4 in. (102 mm) from any adjacent walls.
- 3- Lean the bottom of the bracket on the floor. Mark the height desired of the heater bottom using the wholes with inches written on the side. Remove the bracket. Screw partially 2 of the 4 screws supplied in the previous marks. Slide the bracket of the heater over the 2 screws into the keyholes. Mark the holes to screw the top of the bracket. Complete fixing the wall bracket by tightening the 4 screws.
- 4- Untighten wire holder (for Loomex cable) and make electrical connections by having the heater the nearest possible to the electrical wire. For BX cable, remove one of the two knock-outs, install a connector (not furnished) and have 6 to 8 in. (15 to 20 cm) of free wire and get them out of the hole of the wire holder in order to make connections from outside. Do not forget to connect the green wire to ground wire in order to have a safe grounded heater.
- 5- Once connections completed, place bottom T slots in the base part of support, and clip the upper side of the body in the upper U shape part of the support.
- 6- Do not let the excess of the supply wire come in contact with the back of the heater, as well as any other object.
- 7- Put the main power on.

CAUTION:

- High temperature, risk of fire, keep electrical cords, drapery, furnishings, and other combustibles at least 36 in. (915 mm) from the front of the heater and away from the sides. To reduce the risk of fire, do not store or use gasoline or other flammable vapors and liquids in the vicinity of the heater.
- In addition to ensuring that the clearance distances set out above are respected, ensure that the framing materials, insulation and finishing which are likely to be in contact with or close to the device can withstand temperatures of at least 90 °C (194 °F).

IMPORTANT

Do not obstruct the front of the heater for at least 48 in. (1200 mm).

INS477-201407-07

OPERATING INSTRUCTIONS

- The heater must be properly installed before it is used.
- Turn the power on at the circuit breaker panel.
- Electronic thermostat: Set the thermostat temperature at the wanted room temperature
- Consult the specific instructions of the thermostat.


CONTROL:

Model with built-in electronic thermostat:

The electronic thermostat shall keep the room temperature in a range of ± 1 °C (± 2 °F) unless the room is not well insulated or the heater is too or not enough powerful for the room.

Model without control:

Use a proportional pulsing electronic thermostat with a cycle of 15 seconds maximum.

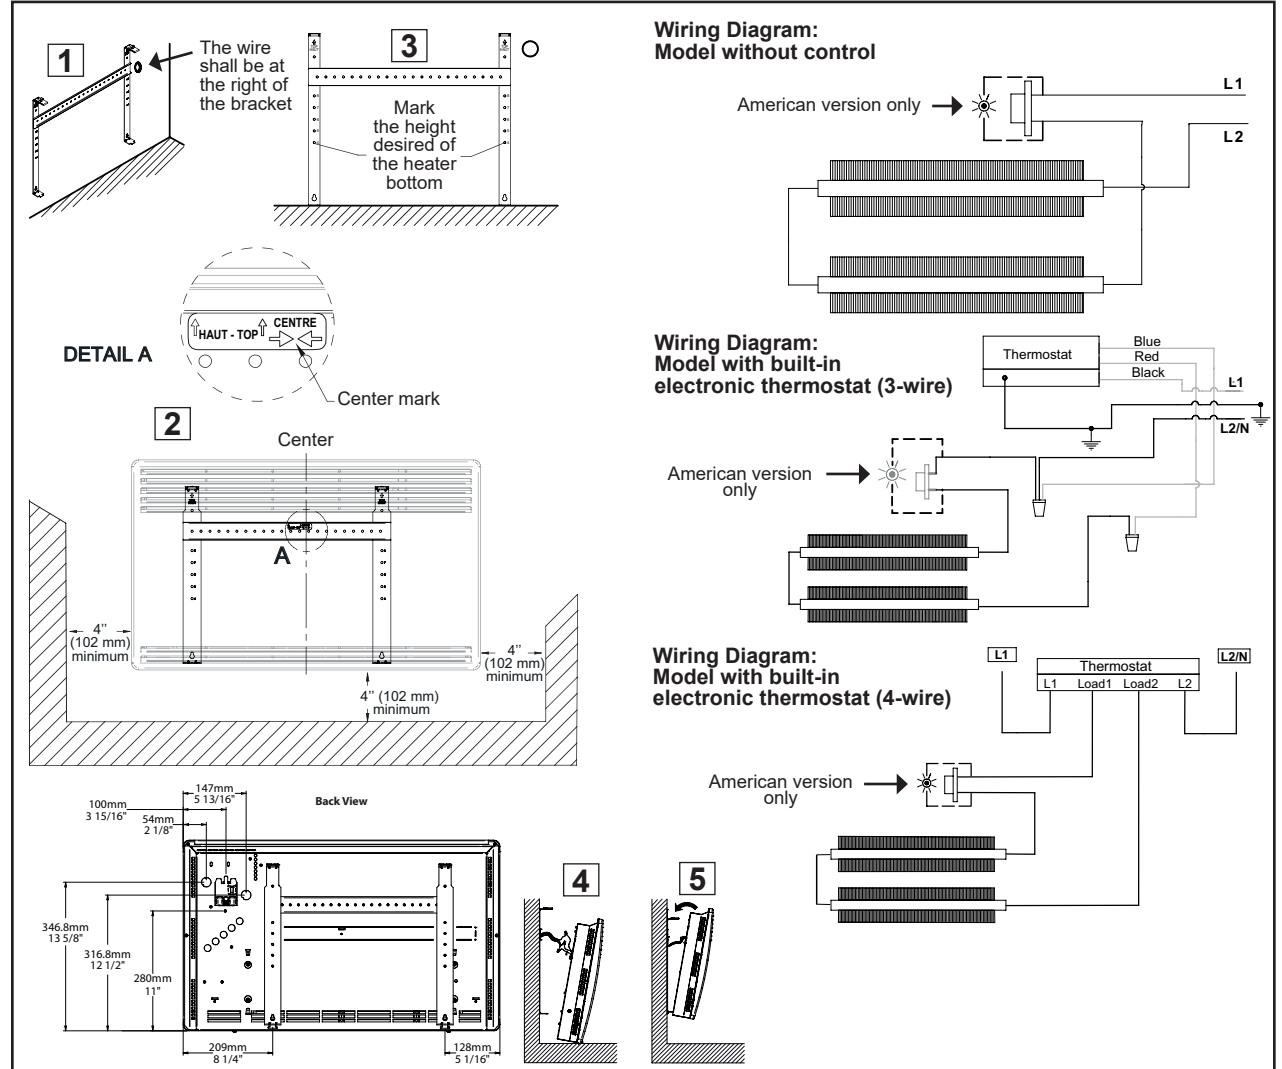

MAINTENANCE INSTRUCTIONS

- 1- Once a year, remove the front panel and use a vacuum cleaner to remove the dust accumulation inside the heater and through openings of the front panel.
- 2- Cleaning should be done while the heater is disconnected from the main service panel. Wait until the housing and heating element cool before performing maintenance.
- 3- Replace the front panel before energizing.
- 4- Any other servicing should be performed by a qualified technician.

WARRANTY

Please refer to the product sheet at www.ouellet.com.